

# XP Series Resistance Isolated Transmitter Data Sheet

#### 1. General

XP Series Resistance Isolated Transmitter (one input one output, one input two outputs) receives 2-wire resistance signal from the industrial field, and converts into a standard process signal that has a linear relationship with the resistance value. It is widely used in data acquisition, signal transmission and conversion, PLC, DCS and other industrial measurement and control systems in the fields of machinery, electricity, telecommunications, petroleum, chemical industry, steel, sewage treatment, building construction, etc. It is used to perfect and supplement the function of the system I/O plug-in, improve the anti-interference ability of the automatic control system, and ensure the stability and reliability of the system.



#### 2. Features

- Input, output and power are completely isolated, with strong anti-interference ability
- High accuracy, high linearity, long term running stability
- Modular design, small size, low power consumption, suitable for intensive installation
- ◆ Plug-in construction, easy installation, disassembly and maintenance

## 3. Specifications

Power supply: DC24V±10%, AC220V

Power consumption: ≤1.5W

Input: 0~100kΩ resistance

Exciting current: ≤5mA

Output: DC voltage, DC current

Load resistance: voltage output  $\geq 10 \text{K}\Omega$ 

current output ≤350Ω

Accuracy: ±0.2%F.S, ±0.5%F.S

Temp. coefficient: ≤±150PPM/°C

Insulation resistance: ≥100MΩ/500VDC

 $\label{eq:decomposition} \mbox{Dielectric strength: input/output } \geqslant \mbox{2000VAC (1min)}$ 

input/power  $\geqslant$ 2000VAC (1min)

output/power ≥1000VAC (1min)


Operating humidity: 10~90%RH Atmospheric pressure: 86~106kPa

Installation: DIN 35mm rail

Dimension: 122mm×18mm×96mm

## 4. Ordering Information

#### XP series code table :

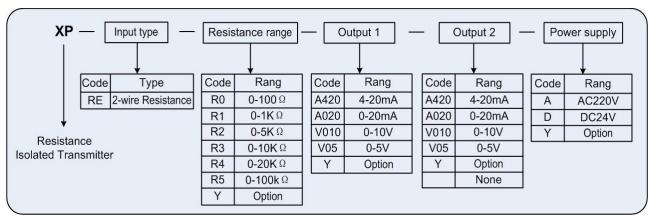

- 1 -

Addr: Building B,AscendasiHub,No.5 Xinghan Road,SIP Tel: +86-512-68381801 +86-512-68381802


Fax: +86-512-68381803 +86-512-68381939

Web: http://www.surpon.com




### 5. Dimension & Installation


### **Dimension** (122mm×18mm×96mm)

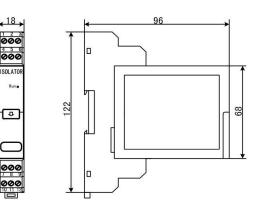


#### Installation

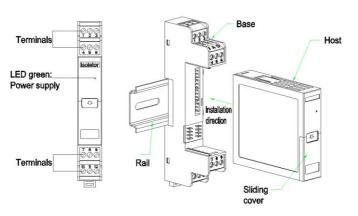

# 6. Typical Connection

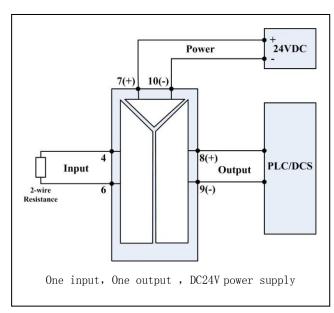

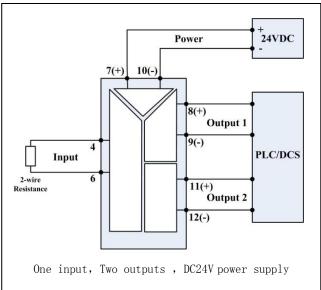

Note: The connection diagrams given in this manual are typical. When installing, please refer to the connection diagram on the product.

### 7. Examples of ordering

Refer to the code table above and provide the model number correctly.

- Example 1 input: one channel 0-1KΩ resistance, output: one channel 4-20mA, power supply: 24VDC order model: XP-RE-R1-A420-D
- Example 2 input: one channel 0-10KΩ resistance, output: two channels 4-20mA, power supply: 24VDC order model: XP-RE-R3-A420-A420-D (abbreviated as: XP-RE-R3-2A420-D)
- Example 3 input: one channel 0-560Ω resistance, output: one channel 4-20mA, power supply: 24VDC order model: XP-RE-Y-A420 -D (Y=0-560 $\Omega$ )



Please Scan